


# KIN BASE 1

**ZEITRAUM**

**Aufbauanleitung 03/2016**

## **NOTWENDIGES WERKZEUG:**


Kreuzschraubendreher / Akkuschrauber

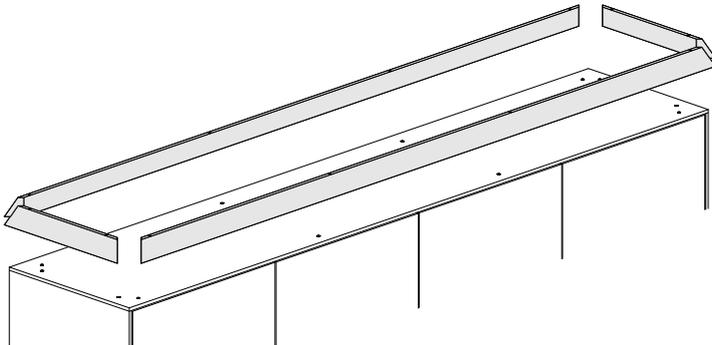


Wenn nicht vormontiert:

Den Korpus vorsichtig auf die Oberseite stellen (eine Decke o.ä. unterlegen) und die Sockelleisten mit den beigelegten Schrauben in die vorgebohrten Löcher schrauben.

# KIN BASE 2+3


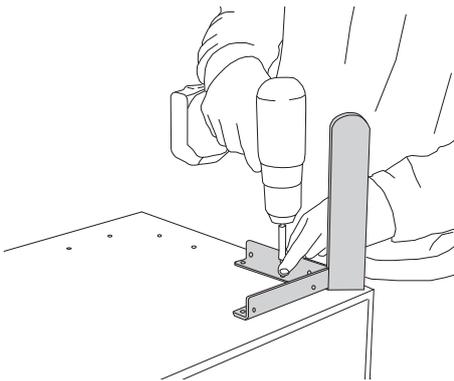


**1.** Den Korpus vorsichtig auf die Oberseite stellen (eine Decke o.ä. unterlegen) und die Metall-FüÙe mit den beigelegten Schrauben in die vorgebohrten Löcher schrauben.

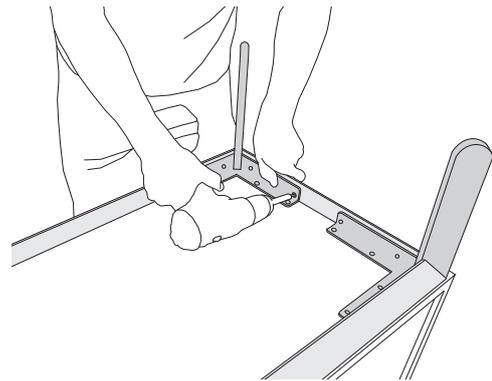

**2.** Die Holzblende an die Winkeln der Metall-FüÙe schrauben.

## **Montage mit Mittelfuß:**

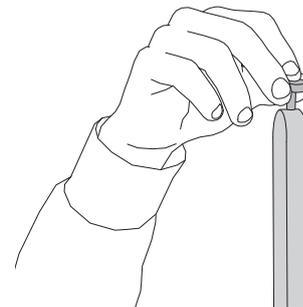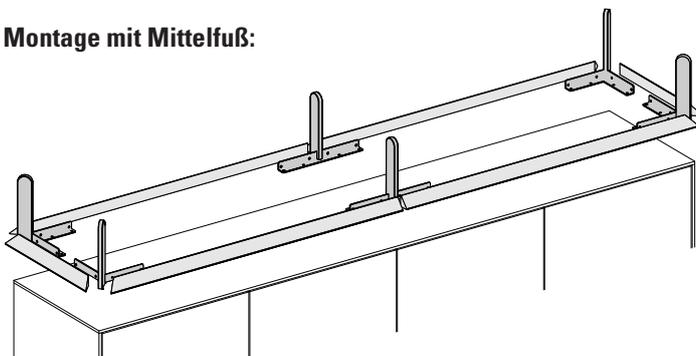

**3.** Die VerstellfüÙe in die Gewinde der Metall-FüÙe schrauben. Das Möbel umdrehen und mit Hilfe der VerstellfüÙe vertikal und horizontal ausrichten


# KIN BASE 1

**ZEITRAUM**

**Assembly Instruction 03/2016**


## TOOLS REQUIRED:

Cross Screwdriver

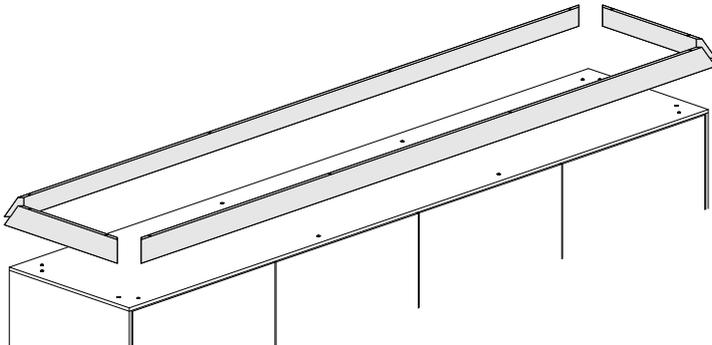


Place the furniture gently upside down (use a blanket) and fix the plinths to the bottom side with the enclosed screws. The required holes are predrilled.

# KIN BASE 2+3


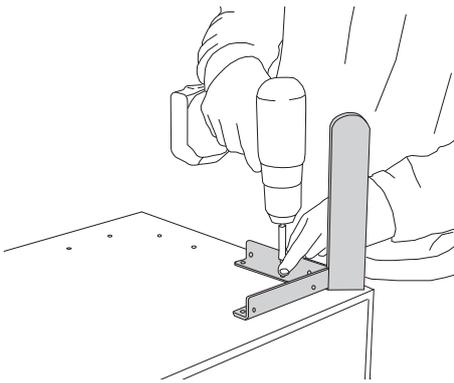


**1.** Turn the furniture gently on the top (use a blanket) and fix the metal feet to the bottom side with the enclosed screws. The required holes are predrilled.

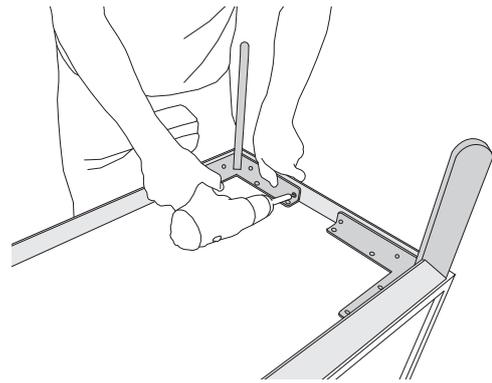

**2.** Fix the plinths to the wings of the metal feet with the enclosed screws.

## assembling with middle feet:

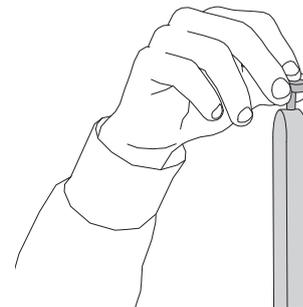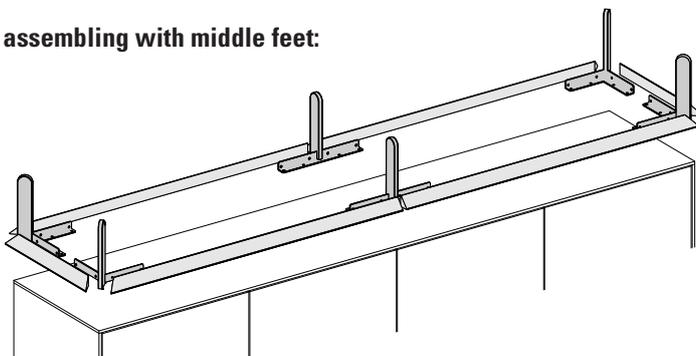

**3.** Screw the adjustable feet into the metal feet. Turn the furniture again and stabilise it by using the adjustable feet.