


Aufbauanleitung 05/2016**notwendiges Werkzeug:**

Innensechskantschlüssel (beiliegend)

Verbinder:



Tischbein mit Zargenplatte

(Gewindebolzen, Metallplatte, Sechskantschraube)

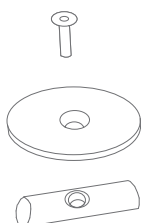


Zarge mit Tischplatte


(Schnellspanner, Beilagscheibe, Metallschiene)

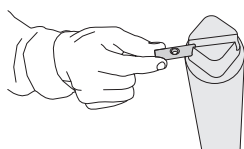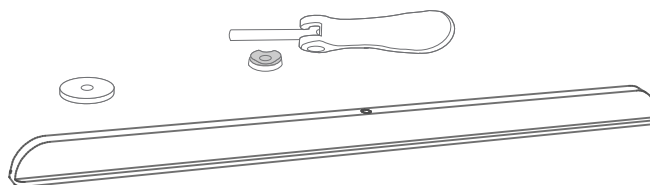


1. Den Bolzen mit dem Gewindeloch nach oben in die Fräsung im Tischbein schieben.

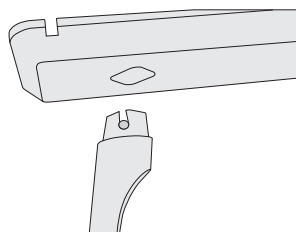


2. Das Tischbein in die Zargenplatte stecken.

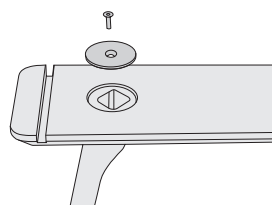


3. Die runde Metallplatte in die dafür vorgesehene Fräsung legen.

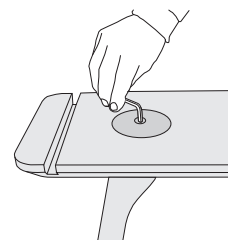


4. Die Verbindung (Bolzen - Metallplatte - Schraube) mit dem Sechskantschlüssel fixieren.

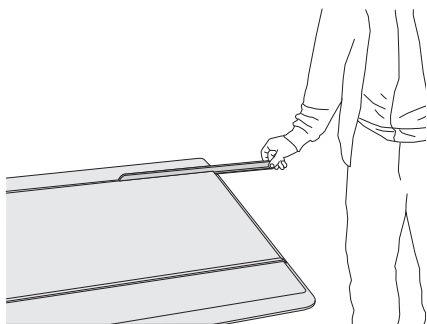

5. Die Metallschienen in die Fräsung an der Unterseite der Tischplatte schieben. Das Ende der Schiene sollte etwa bündig mit der Tischkante sein.

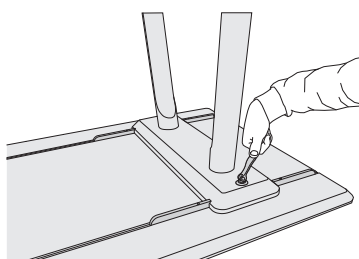



6. Die zusammengebaute Zarge auf die Schienen schieben.

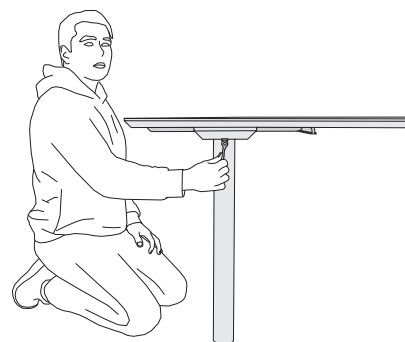

7. Mit dem Schnellspanner mittig auf der Schiene fixieren.

Ansatzplatte anbringen

Die Schnellspanner lösen. Die Tischzarge und die Schienen an das Ende der Tischplatte schieben, so dass sie bis zur Hälfte überstehen. Die Ansatzplatte aufschieben. Die Ansatzplatte und die Tischplatte sollten zu gleichen Teilen auf der Zarge aufliegen. Alles mit den Schnellspannern fixieren.

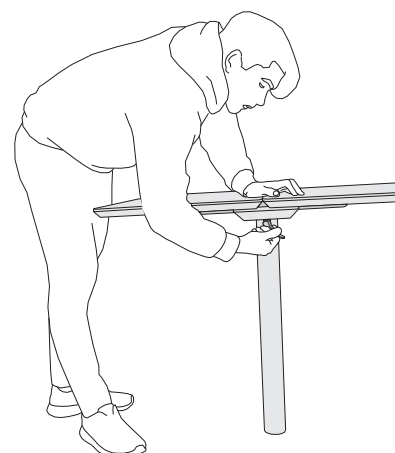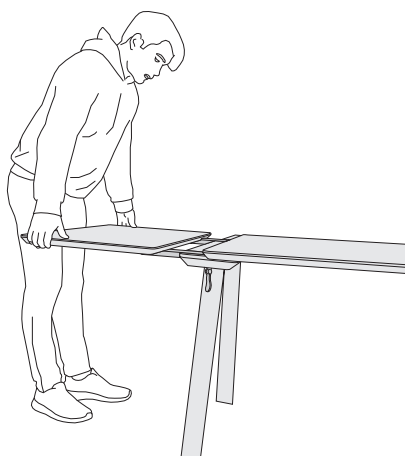

Assembly instruction 05/2016**Tools required:**

hexagon key (enclosed)




Mechanical fasteners:

for table leg with frame top


(threaded bolts, metal plate, cylinder head screw)

frame with table top


(quick-release fastener, washer, metal rail)

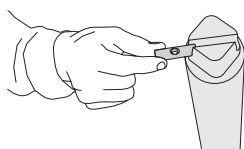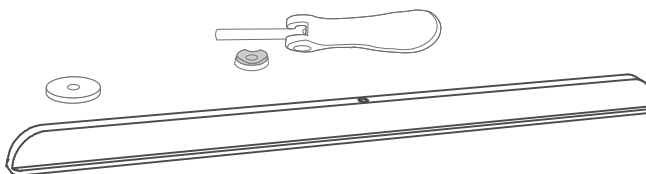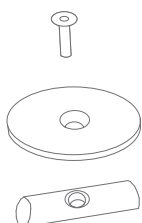


1.
Place the bolt with the threaded hole
upwards into the milling in the table
leg.

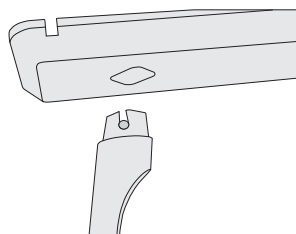


2.
Insert the table leg into the frame top.

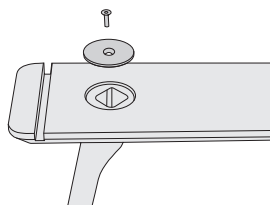


3.
Place the round metal plate into the
round milling in the frame top.

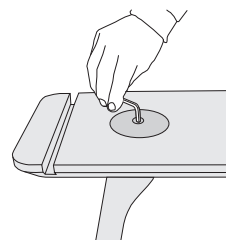


4.
Fix the connection of bolt - metal plate
- screw with the hexagon key .

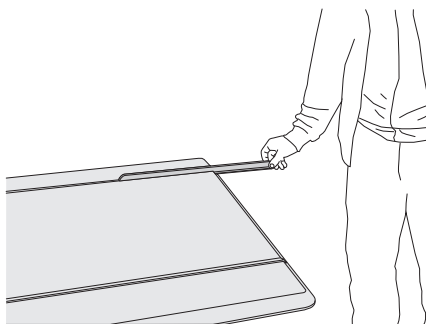

5.
Place the metal rail into the milling at the bottom
side of the table top. The end of the rail should be
flush with the edge of the table.

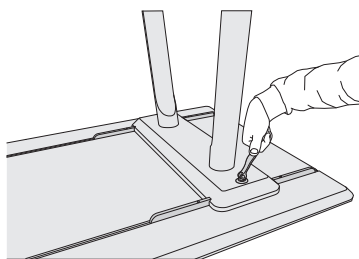

6.
Place the legs frame at the rails...

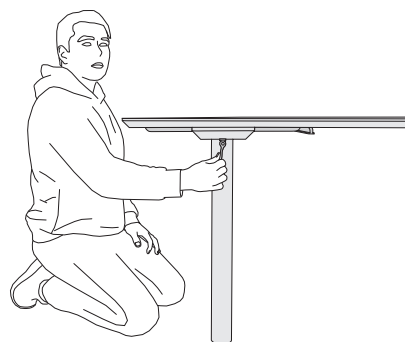

7.
...and fix it with the quick-release
fastener.

Table extension

Loosen the quick-release fastener. Push the
tableframe and the rails beyond the table top so
that half the leg and rails are under the table top
and the other half is under the extension leaf.
Fix everything with the quick-release fastener.

