RAIL SOLO

ZEITRAUM


Assembly instruction 05/2021 TOOLS:

Allen key SW 4 (enclosed)

Countersunk bolts (M8x20)



Please fix up the table on a soft surface to avoid damages!

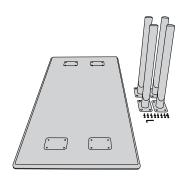


1. Lay the table with its top upside down on a carpet or blanket.




2. Put a base in the provided spot.



3. Stick the four srews in its holes and tighten them up with the allen key.

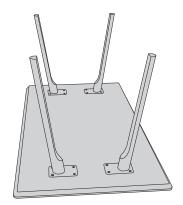

4.Go on with the remaining bases and complete the assembly.

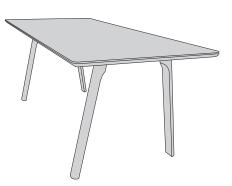

5. Turn over the table on its bases.