

ATELIER

Assembly instructions 09/21

TOOLS:

Allen key SW 5 (enclosed)

8 x XS bolts





8 x connector housings



8 x grub screws





cylinder head screws (5x70)
with flat washers

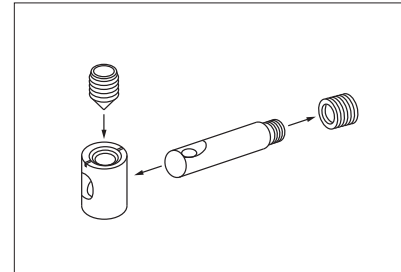


Video:

<http://www.scheulenburg-direkt.de/index.php?page=content&colD=11>

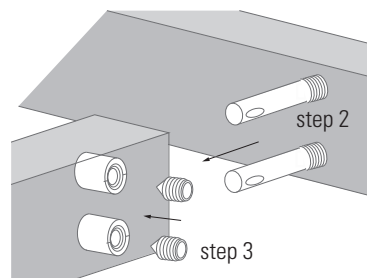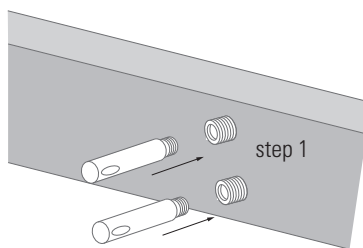

step 4

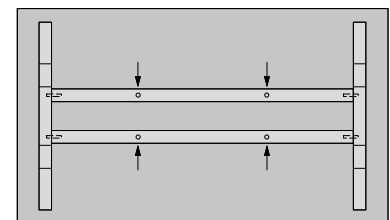

ASSEMBLY OF THE FRAME:

1. Screw the bolts into the sidepieces. Insert the connector housings into the crossbars.
2. Slot the crossbars onto sidepieces.
3. Fix the crossbars with the grub screws.
4. Screw the frame to the bottom side using cylinder head screws.

If you cannot screw in the grub screw flushly, loosen connection and unscrew the bolt slightly. Then connect again.

PLEASE NOTE:

Do not push the piece of furniture. For transport lift both sides!