



IN HEAVEN

Assembly Instructions 03/2021

9.

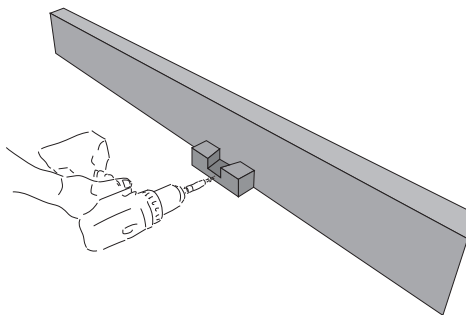

10.

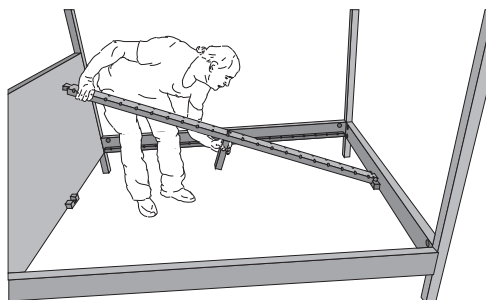

Push the center support blocks onto headboard **(1)** and footboard **(3)**. Use Spax screws to secure them.

Attach the center foot to the center rail **(6)** and place the center rail on the center support blocks.

Tools required:

allen key (enclosed)
cordless drill driver
open-end wrench size 10
ladder

16 × Maxifix connector housings



16 × Maxifix bolts



8 × frame connectors





8 × cylinder head screws (M8x25)
with flat washers



10 × Spax screws (5x50)

Please assemble the bed **on a soft surface (e.g. a carpet or blanket)** to avoid damages.

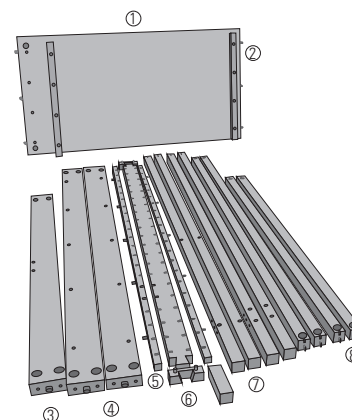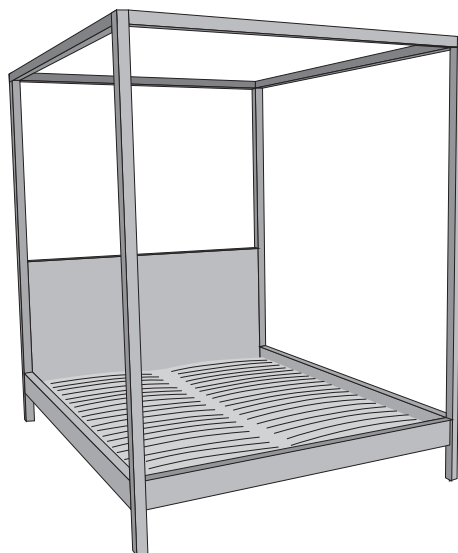


- 1 headboard
- 2 vertical bars
- 3 footboard
- 4 side rails
- 5 support bars
- 6 center rail and center foot
- 7 corner posts
- 8 upper frame

ZEITRAUM GmbH
Äußere Münchner Str. 2
D-82515 Wolfratshausen

Tel +49 (0)8171.418130
Fax +49 (0)8171.418141


info@zeitraum-moebel.de
www.zeitraum-moebel.de

1.

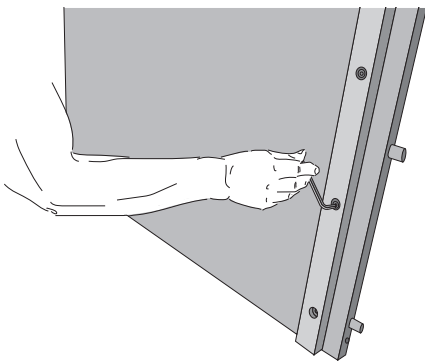


Loosen the screws of the vertical bars **(2)** at the headboard **(1)** and put the bars aside.

2.

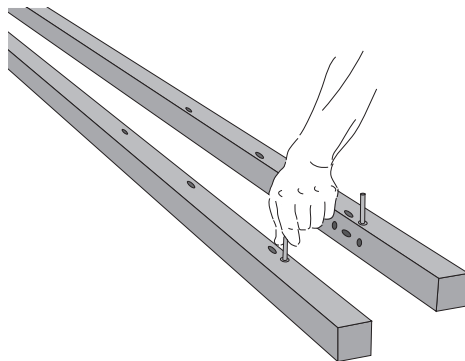


Screw the Maxifix bolts into the corner posts **(7)**. Insert the connector housings into side rails **(4)**, headboard **(1)** and footboard **(3)**. When aligning the housings, ensure that the arrow points towards the intersecting hole.

5.

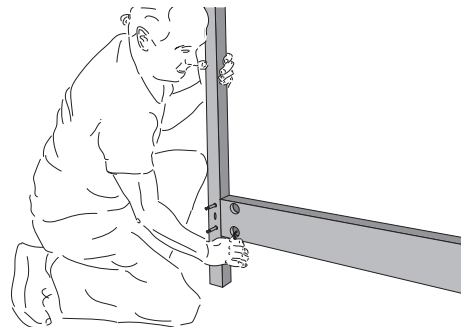


Fix the corner posts **(7)** to the side rails **(4)**.

6.

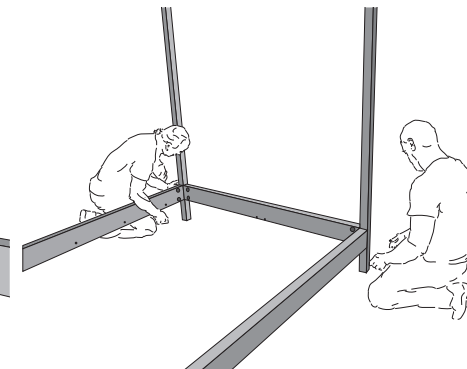


Attach the footboard **(3)** to the corner posts **(7)**.

3.

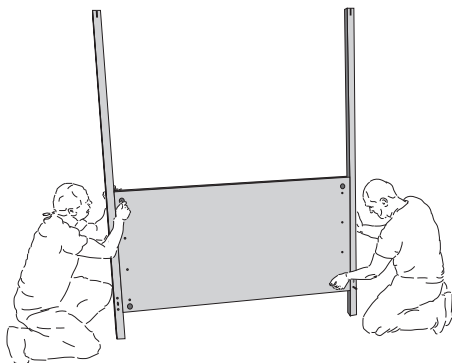


Locate the headboard **(1)** onto the Maxifix bolts of the corner posts **(7)** and tighten the connectors using the allen key. Reattach the vertical bars **(2)**.

4.

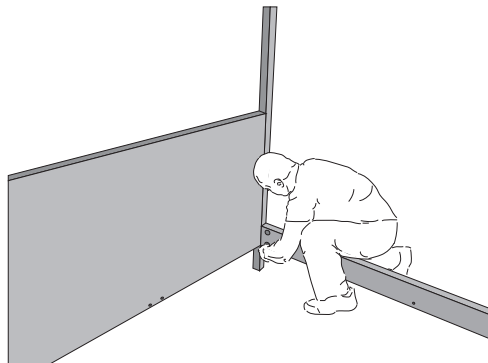


Attach the side rails **(4)** to the headboard **(1)**.

7.

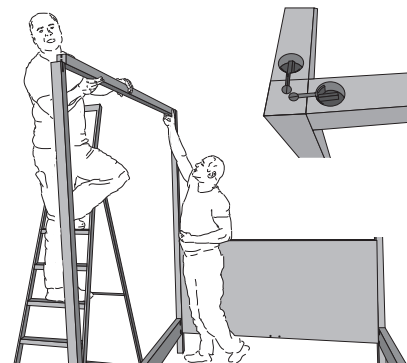

Place the bars of the upper frame **(8)** in between the corner posts **(7)** and secure them with frame connectors. Tighten the connectors using an open-end wrench.

8.

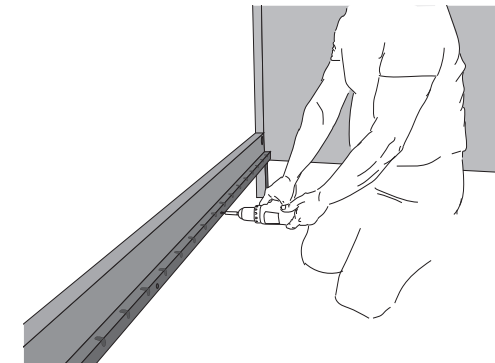

Push the support bars **(5)** onto the holes in the side rails **(4)** and secure them with Spax screws.