


NOON 2

ASSEMBLY INSTRUCTIONS 11/2011

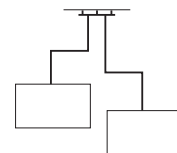

Required tools:

- Flat-tip screwdriver (cabling)
- Phillips screwdriver (ceiling mounting)
- Open-end wrench, 13 mm (installation of bracket arms)

Installation instructions:

- The lights must be installed and connected by a professional only.
- In order to avoid scratches, a soft padding should be placed under the lights during installation.

Installing the bracket arms:

Remove the canopy from the packaging.

Insert arm no. 1 into square hole 1 and screw down from above with a hexagon nut.

Insert arm no. 2 into square hole 2 and screw down from above with a hexagon nut.

Arrange arm nos. 1 and 2 in a straight line and secure both arms with a second hexagon nut.

Insert arm no. 2 into square hole, connect grounding with hexagon nut.

EUROPE Connect the cables to the luster terminals as follows:

blue to blue


brown to brown

USA Connect the cables to the luster terminals as follows:

white no. 1 to **N** no. 1 - black no. 1 to **L** no. 1

white no. 2 to **N** no. 2 - black no. 2 to **L** no. 2

The UL cable with the smooth casing is **L**,
and the UL cable with the longitudinal
grooves in the casing is **N**.

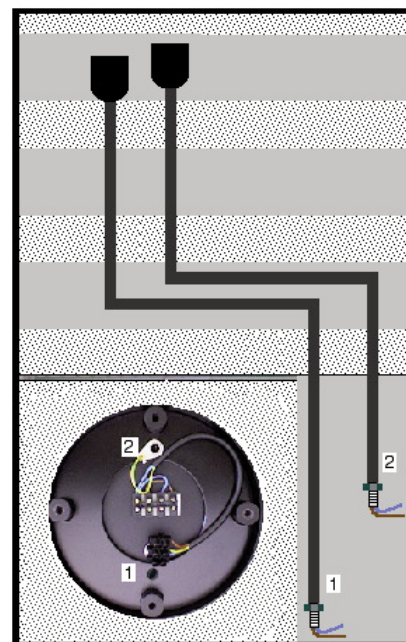

Ceiling mounting and connection:

Position the lamp on the ceiling and drilled holes mark.

Drill holes, and insert screw anchors.

Position ring on the canopy and connect the ceiling outlet cable.

Mount the light on the ceiling with the included Phillips head screws.

Wipe metal parts with a soft cloth to remove any dust and fingerprints.

Attach lamp shades to the holders using the ring nuts, turning the adhesive seams to the inside.

Carefully arrange the lamp shades horizontally.

Screw in light bulbs and hang the diffuser panels in the lampshades.

