

Assembly instructions 05/2023

TOOLS



required:
drillmaschine, level

enclosed (for one AD HOOK):

2x wall plugs (Ø 8mm)





2x Spax screws (4,5x50mm)

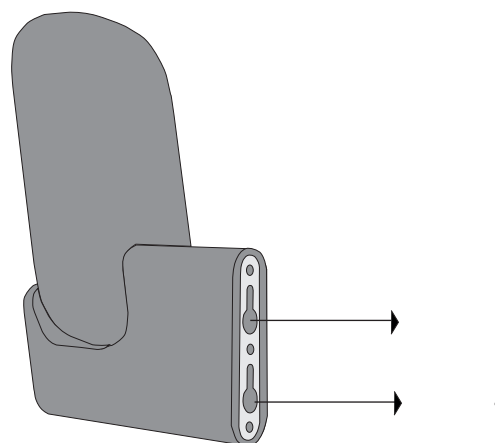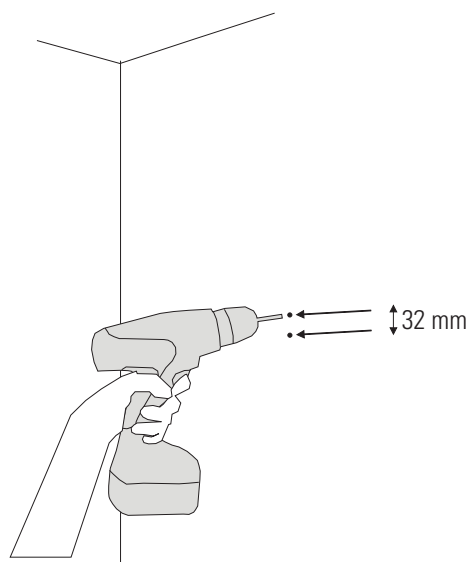

1. Mark two points at the desired position with a vertical distance of 32 mm. Drill two holes at those points. Use suitable wall anchors (depending on the wall type) to mount the hooks with the screws. After that, tighten the screws until 7 mm of the screws are still visible.

2. Place the hook with the keyhole fittings on the screw heads. If necessary, adjust the screws.

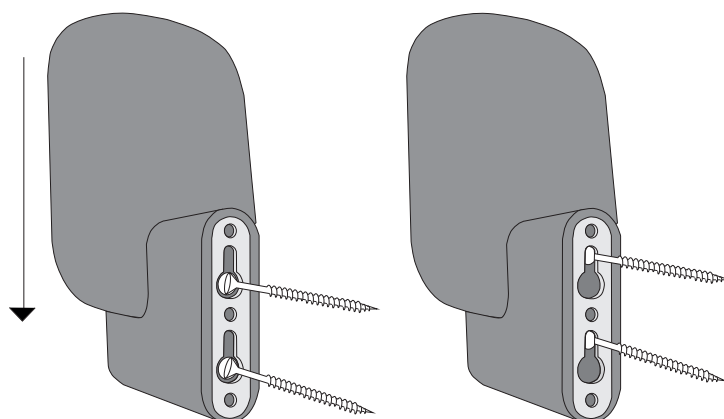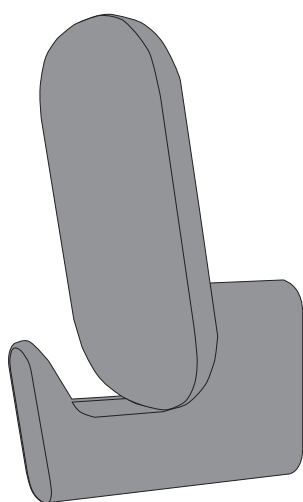

3. Push until it stops below.

functionality of the keyhole fittings