ONDE

ZEITRAUM

Aufbauanleitung 09/2026

Werkzeug

Maulschlüssel SW 17 (beiliegend)

Innensechskantschlüssel (beiliegend)

Verstell Füße Wagner

Holzfüße:	4x M6 x 25
Marmorfüße:	4x M6 x 15

Schrauben

Holzfüße:	6x Senkkopfschraube M6 x 30
Marmorfüße:	6x Senkkopfschraube M6 x 25
Holzplatte:	8x Tellerkopfschraube M6 x 30
Marmorplatte:	8x Tellerkopfschraube M6 x 25

*Aufbau des Möbels auf einer **weichen Unterlage** (z.B. einer Decke) durchführen, um Beschädigungen zu vermeiden.*

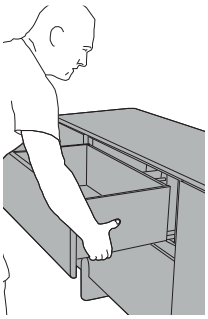

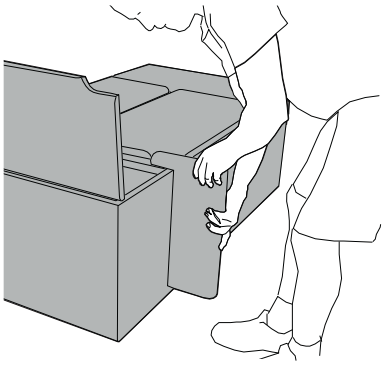

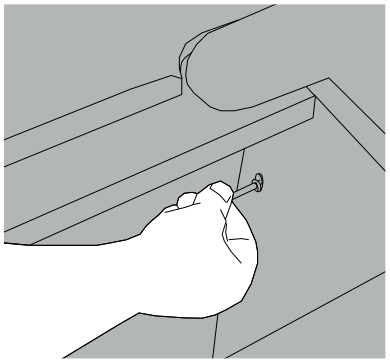

1. Die eingebauten Schübe aushängen. Den Korpus zu zweit auf die Rückseite legen und die Füße mit jeweils drei Senkkopfschrauben befestigen. Wenn gewünscht die beiden Verstellfüße pro Fuß eindrehen. Bei starken Unebenheiten im Boden längere Verstellfüße verwenden.

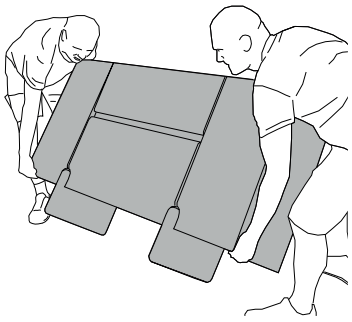

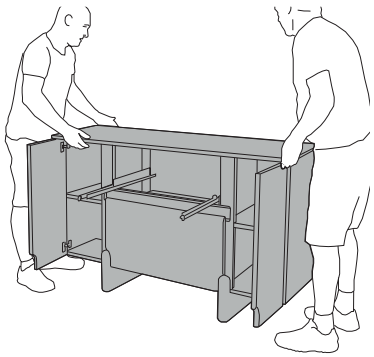

2. Den Korpus zu zweit aufstellen, die Türen öffnen und die Abdeckplatte auf den Korpus legen.

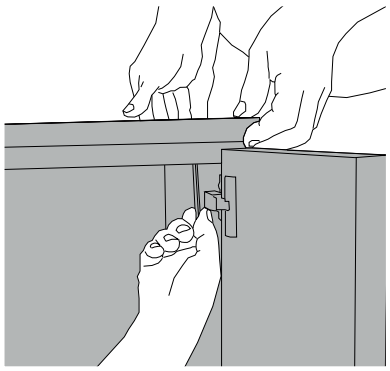

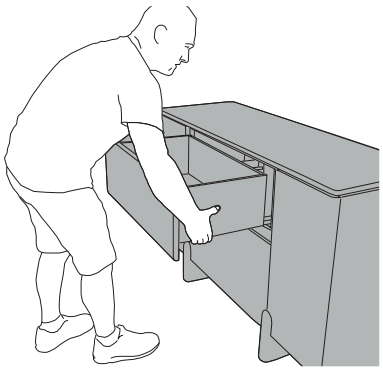

3. Die Abdeckplatte mit den Tellerkopfschrauben von Innen am Korpus befestigen. Die Schubkästen nach der Montage wieder einhängen. Eine Wandmontage des Möbels ist notwendig, dazu bitte die Schritte auf der beiliegenden Anleitung zur Kippsicherung befolgen.

ZEITRAUM GmbH • Äußere Münchner Straße 2 • D-82515 Wolfratshausen • Tel +49 (0) 8171 – 418130 • Fax +49 (0) 8171 – 418141 • info@zeitraum-moebel.de • www.zeitraum-moebel.de

ONDE

ZEITRAUM

Assembly instruction 09/2026

tools

Open-end wrench SW 17 (enclosed)

allen key (enclosed)

Adjustable feet

wooden feet:	4x M6 x 25
marble feet:	4x M6 x 15

screws

wooden feet:	6x countersunk screw M6 x 30
marble feet:	6x countersunk screw M6 x 25
wooden plate:	8x flat-head screw M6 x 30
marble plate:	8x flat-head screw M6 x 25

*Assemble the furniture on a **soft surface** (e.g. blanket) to avoid damage.*

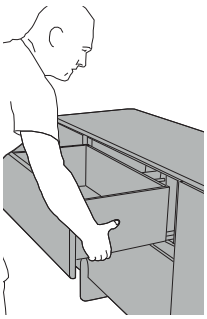

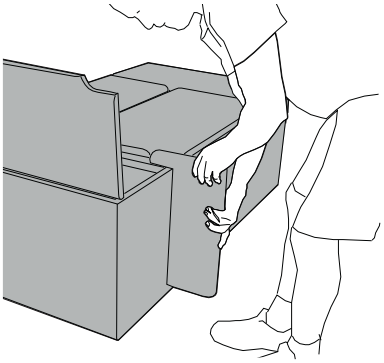

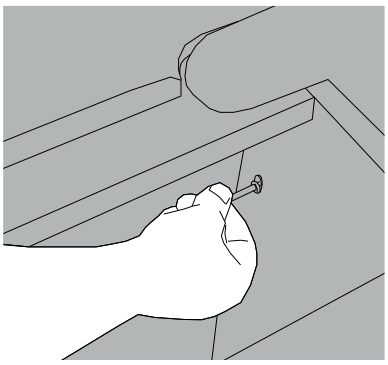

1. Unhook the drawers. With two people, lay the cabinet on its back and secure the legs with three countersunk screws each. If desired, screw in the two adjustable feet per leg. If the floor is very uneven, use longer adjustable feet.

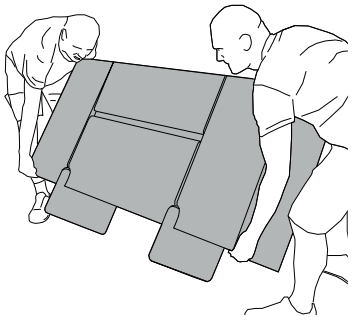

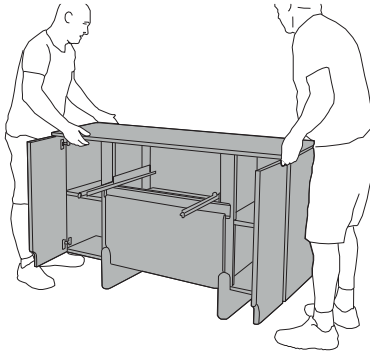

2. Set up the cabinet with two people, open the doors and place the top panel on the cabinet.

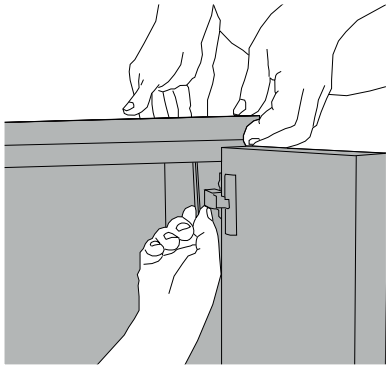

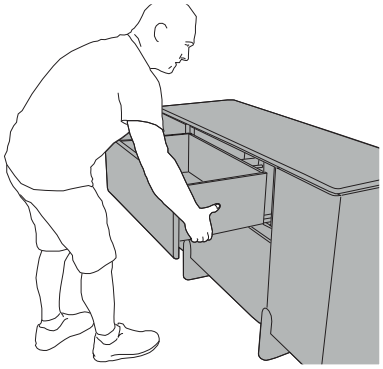

3. Attach the cover plate to the cabinet from the inside using the pan-head screws. Reattach the drawers after installation. The cabinet must be mounted to the wall; to do so, please follow the steps in the enclosed tilt-prevention instructions.

ZEITRAUM GmbH • Äußere Münchner Straße 2 • D-82515 Wolfratshausen • Tel +49 (0) 8171 – 418130 • Fax +49 (0) 8171 – 418141 • info@zeitraum-moebel.de • www.zeitraum-moebel.de